



**INSTALLATION INSTRUCTIONS
FOR DURA-BLACK DRIP FREE*
STOVEPIPE KITS
(18" Clearance to Combustibles)**

IMPORTANT


Read all instructions carefully before starting the installation. The Simpson Dura-Vent warranty will be voided, and serious fire, health, or other safety hazards may result from any of the following actions:

- Installation of any damaged Dura-Black component.
- Unauthorized modification of any Dura-Black component
- Installation of any component part not manufactured or approved by Simpson Dura-Vent.
- Installation other than as instructed by Simpson Dura-Vent and the appliance manufacturer.

Consult your local building codes before beginning the installation.

INSTALLATION PROCEDURE

Step 1. Insert the Slip Connector section of pipe into the previously installed Ceiling Support Box. Position it so the seams are facing the wall, and the smooth side is facing the room. Push it in firmly, until the locking notches engage the top of the rim of the hole in the support box. It is extremely important that the Support Box be positioned so that the single wall pipe is at least 18" from the combustible wall, and also that the support box protrudes at least 2" below the ceiling. Reposition the Support Box if necessary, to meet these two requirements.

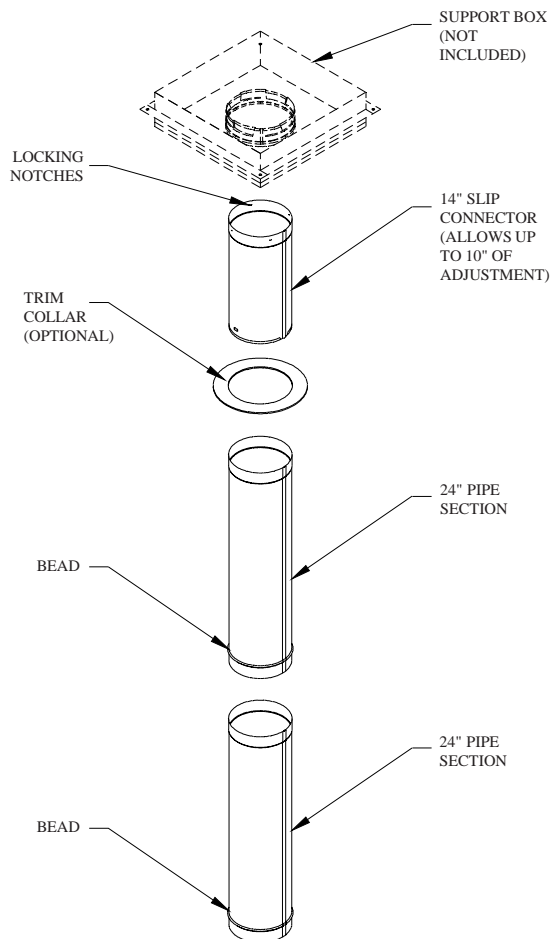

Step 2. If you are installing the optional Trim Collar, slide the Trim Collar upwards over the Slip Connector, until it is next to the bead. Using the two pre-punched holes in the Trim Collar as a guide, drill two 1/8" diameter holes in the Support Box. Screw the Trim Collar to the support box, using the two sheet metal screws provided with the kit.

Step 3. Slide the first Pipe Section upwards over the Slip Connector. Rotate it so the seam is facing the wall. Push the Pipe Section upwards about 1 inch, so it will be held in place by the Slip Connector. The Slip Connector slides inside the pipe.

Step 4. Install the second Pipe Section (with seam facing the wall) on to the stove collar or the appliance adapter (whichever is appropriate for your installation). Note that the bottom of the Pipe Section goes inside the stove collar or appliance adapter.

Step 5. You are now ready to connect the top and bottom Pipe Sections. Align the pipe system vertically so the Pipe Sections align together. Adjust the pipe assembly for height by pushing upwards against the top Pipe Section.

The top Pipe Section will slide up the outside of the Slip Connector (up to approximately 10" of adjustment). Drop the top Pipe Section down into the lower Pipe Section. No cutting is required. If possible, fasten the pipe assembly to the appliance with screws. Should the stove not readily accommodate the pipe system, the Dura-Vent All Fuel Chimney Catalog has a variety of adaptors.

Step 6. To insure the safety of the installation and to increase the rigidity of the system, use 3 sheet metal screws equally spaced around each joint. Drill three 1/8" holes around the circumference of each joint, and screw in the sheet metal screws. This is especially important if there are any elbows in the system.

***Note:** If 90 degree elbows are used in the system, no drip-free representation may be made. Single wall elbows inherently have a certain amount of spacing at the joints, which may in some cases permit creosote leakage.

If the ceiling is higher than 8 feet, obtain Pipe Sections from your dealer to accommodate the additional height. Pipe Sections are available in 1', 2', and 4' lengths. (10" diameter pipe available in 1' and 2' lengths only)

WARRANTY

Simpson Dura-Vent warrants Dura-Black single-wall stovepipe to be free of defects in material or workmanship for a period of 5 years from the date of installation. All warranties, whether expressed or implied, shall be limited to the replacement of pipe lengths and components. Simpson Dura-Vent shall not be responsible for the cost to remove or install replacement pipe or components. In no event shall Simpson Dura-Vent be responsible for any incidental or consequential damage. All warranties shall be conditional upon compliance with the manufacturer's recommended installation and maintenance procedures and intended use of the product. All products must be maintained by periodic inspection and cleaning, including chimney exposed to weather containing corrosive elements. This warranty may not be extended or modified by our agents or representatives. To qualify for warranty replacement, Simpson Dura-Vent shall be given the opportunity to examine the chimney parts prior to replacement.

NOT A UL LISTED PRODUCT

Note: Dura-Black pipe will exhibit a moderate paint-like odor in the initial use. This is a normal curing of the finish and will disappear after one or two uses of the appliance.



SIMPSON
DURA-VENT, INC
PO Box 1510 (800)-835-4429
Vacaville, CA (707)-446-4740 (FAX)
95696-1510

Vicksburg, MS

www.duravent.com

June 2003
L122